


GENERAL THEATRE QUICK TIPS – Microphone Charging

Below you will find some general quick tips to help you charge the microphones correctly.

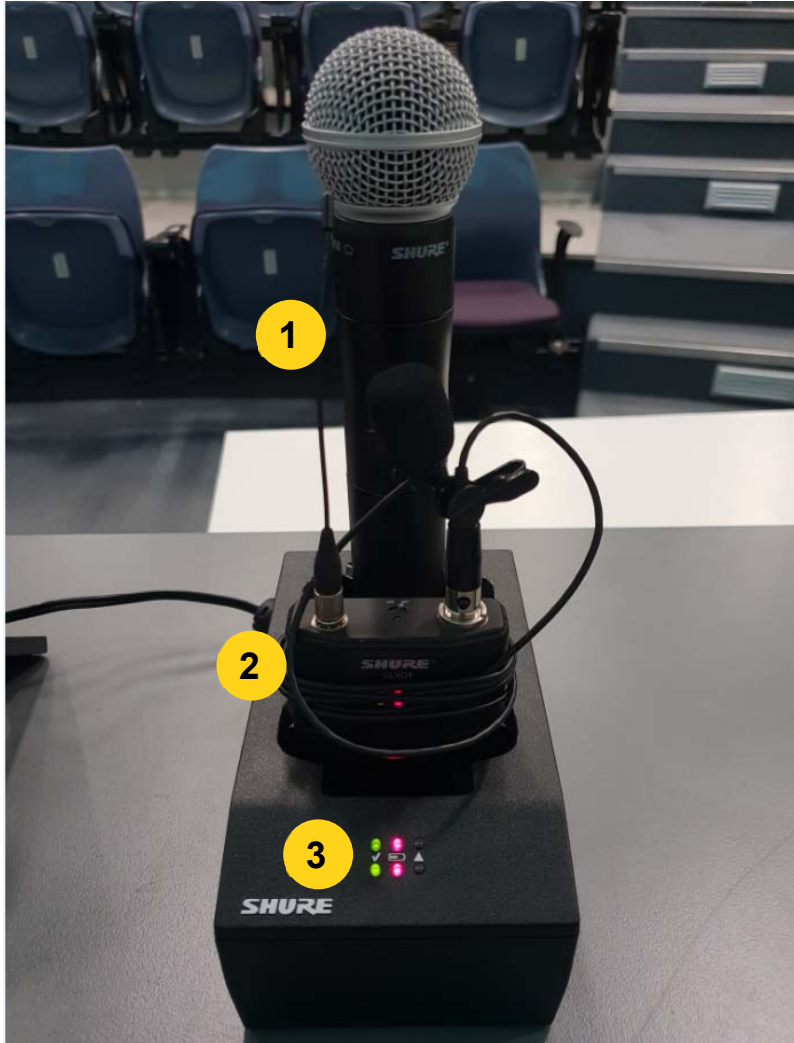

1. Handheld Microphone: Place in charger with the Microphone LCD facing the front

2. Lapel Microphone: Place in charger with the Microphone LCD facing the front

3. Charging Indicator: When microphones are docked correctly, the LEDs will illuminate

- RED: 0-90% Charge
- RED & GREEN: 90-99% Charge
- GREEN: 100% Fully Charged
- AMBER flashing: Error with charging. Undock microphone, wait 3 seconds and re dock.