

## GENERAL THEATRE QUICK TIPS – MoCow Trolley

Below you will find some general quick tips to help you navigate the button controller.

### Turn the system on:

Touch the ON button to activate.



1. **ON/OFF:** Power TV/Monitor ON and OFF
2. **Volume:** Use the buttons to raise and lower the volume.
3. **PC:** Use the PC button to display content from the Micro PC attached. Please ensure that the PC is plugged into power socket and is switched on.
4. **Laptop:** Use the Laptop button to display HDMI source. Check that HDMI cable is connected.



1. **USB:** Can be used for connecting a CHAT 150 speaker/microphone for web conferencing.
2. **HDMI:** Use to connect your laptop, etc.